 


ALT: dedicated input for high winding temperature sensing circuit. If this input goes to +24 Vdc the motor does not start. If the car is running it will stop in the next landing.

The indicator will give a code of alarm F8

MAN: maintenance command. Up and down low velocity run command is ordered with the two first car call inputs.



Alternate output if the first landing designation is configured as "XX"

<p><b>CONTROLES S. A.</b> Electrónica Industrial y Telecomunicaciones</p>	<p><b>CEA31 CONTROLLER USER'S MANUAL</b></p>	<p><b>Fig. 7</b></p>
<p>AVENIDA RIVERA 3314 TEL +598(2) 622 0651 MONTEVIDEO 11300 FAX +598(2) 622 2048 URUGUAY www.controles.com E-mail info@controles.com</p>	<p>Version 6.01 01/05/17</p>	<p>Common Terminals (parallel indicator mode)</p>